



INBOARD MOUNTING COMPONENTS, HS1

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	857334	1	Flywheel housing	
2	857347	1	Cover plate	
3	943589	1	Plug	
4	955542	6	Screw, Flywheel housing	
5	942336	6	Spring washer, Flywheel housing	
6	947224	4	Screw	
7	841247	4	Pin, Engine mount	
8	841316	2	Engine mountings, Engine	
9	857251	4	Rubber cushion, Rubber	
10	941914	6	Spring washer	
11	955535	6	Screw, Mount bracket to engine	
12	950355	4	Nut	
13	955551	2	Screw	
14	955902	6	Washer, Large	
15	955896	2	Washer, Small	
16	857336	2	Engine mountings, Engine	
17	941909	2	Spring washer, Rear mount	
18	955860	2	Nut, Rear mount	
19	946472	8	Screw, Screw	
20	955552	2	Screw	
23	3851835	1	Bracket, Belt tensioner	GL
24	940134	2	Screw	GL
25	181875	1	Ball bearing, Tensioner	
26	861558	1	Pulley, Tensioner	
27	914526	1	Snap ring	
28	860659	1	Sleeve	
29	861672	1	Tensioner	
30	965187	1	Screw, Tensioner	
32	3853368	1	V-belt	GL
38	854185	1	Vibration damper	GL
39	835482	6	Screw	GL
40	940097	6	Washer, Damper	GL
41	942336	6	Spring washer, Damper	GL
42	829489	1	Cover	
43	946752	11	Flange screw	
44	3851872	1	Hose, Pump to cooler	
45	961669	2	Hose clamp	
46	965547	1	Bracket	
47	857045	1	Clamp	
48	946440	1	Flange screw	
49	948645	1	Lock nut	
50	3852332	1	Hose, Oil cooler to pump	GL
51	961669	2	Hose clamp	GL
52	3851910	1	Tube	GL
53	3851911	1	Bushing	GL
54	3851922	1	Clamp, Oil cooler	GL