



ENGINE WIRE HARNESS, Gi

REF	PART NO.	QTY	DESCRIPTION	NOTES
1	3858294	1	Wiring harness	
2	3852527	1	Cable terminal, Trim sender fuel pump	Black
3	3852527	1	Cable terminal, Electrical bra - alternator ground	Black
4	3852084	1	Cable terminal, Oil pressure switch	Tan
5	3853320	1	Cover, Terminal, oil pressure switch	
6	3853565	1	Connector, 2 pin	
7	3852229	2	Cable terminal, Trim sender	Brown/white
8	3854244	1	Cable, Ignition coil	
9	3853565	1	Connector, 2 pin	
10	3852229	2	Cable terminal, Master/slave	
11	3852245	1	Cable terminal, Alternator ground	Black
12	3852235	1	Cable terminal, Alternator excite	Purple
13	3852038	1	Cable terminal, Alternator output	Orange
14	3852130	1	Rubber cap, Terminal	
15	3852233	1	Cable terminal, Alternator sense	Orange
16	3852235	1	Cable terminal, Starter solenoid - starter terminal	Red
17	3852527	1	Cable terminal, Starter solenoid	
18	3852245	3	Cable terminal	
19	3854164	2	Fuse, 50 amp	Engine
20	3852245	1	Cable terminal	
21	3852245	1	Cable terminal	
22	3852235	1	Cable terminal	
23	3854162	1	Breaker, 12.5 amp	Eca
24	3852245	1	Cable terminal	Red
25	3852235	1	Cable terminal	Red
26	3852227	1	Cable terminal	Black
27	3854192	1	Connector, Starter relay	
28	3852254	4	Cable terminal	
29	3853565	1	Connector, 2 pin shift interrupter	
30	3852229	2	Cable terminal, Connector	
31	3853681	1	Cover, Connector housing	
32	3855021	1	Housing, Low pressure fuel pump	
33	3853679	2	Cable terminal	
34	3852246	4	Cable terminal	
35	3852247	4	Cable terminal	
36	3852210	1	Bracket	
37	3850025	1		
38	3852235	1	Cable terminal	
39	3852233	1	Cable terminal	
40	3854163	1	Breaker, 20 amp	Fuel pump
41	3852233	1	Cable terminal, Water temp transmitter	Tan
42	3850671	2	Cable terminal, Injector 1	
43	3850671	2	Cable terminal, Injector 2	
44	3853681	1	Cover	
45	3853679	2	Cable terminal, High pressure fuel pump	
46	3852233	1	Cable terminal, Oil pressure fuel pump	
47	3857189	1	Seal, Knock sensor	
48	3853480	1	Terminal casing, Knock sensor	
49	3860098	1	Ecu, Electronic control module	
50	3854905	1	Sensor	
51	3850397	1	Ect sensor	
52	3850396	1	Sender	
53	3854672	1	Control unit	
54	3850272	1	Bracket, Knock module	
55	3852115	2	Screw, Knock module bracket	
56	3851990	1	Bracket	
57	3852115	2	Screw, Bracket to adapter	
58	3855578	4	Screw, ECM to bracket	
59	3852115	2	Screw, Knock module to bracket	
60	3850688	4	Hose, MAP sensor	
61	3852115	2	Screw, MAP sensor to bracket	
62	3852172	1	Clamp, Hose, MAP sensor	