

DESCRIPTION	SEE SEC.	NOTES
MANUEL SPEED CONTROL LATE TYPE	02D-0160	TD60D,TD60D-83,TID60D, TID60DG
STOP SOLENOID AND INSTALLATION COMPONENTS: TD60D	02D-0220	TD60D,TD60D-83,TID60D, TID60DG
STOP SOLENOID AND INSTALLATION COMPONENTS: TD60D-83	02D-0220B	TD60D,TD60D-83,TID60D, TID60DG
STOP SOLENOID AND INSTALLATION COMPONENTS: TID60D	02D-0220C	TD60D,TD60D-83,TID60D, TID60DG
STOP SOLENOID AND INSTALLATION COMPONENTS: TID60DG	02D-0220D	TD60D,TD60D-83,TID60D, TID60DG
STOP SOLENOID AND INSTALLATION COMPONENTS FOR RQV-REGULATOR: TD60D	02D-0375	TD60D,TD60D-83
STOP SOLENOID AND INSTALLATION COMPONENTS FOR RQV-REGULATOR: TD60D-83	02D-0375B	TD60D,TD60D-83