WIRING HARNESS (EFI)

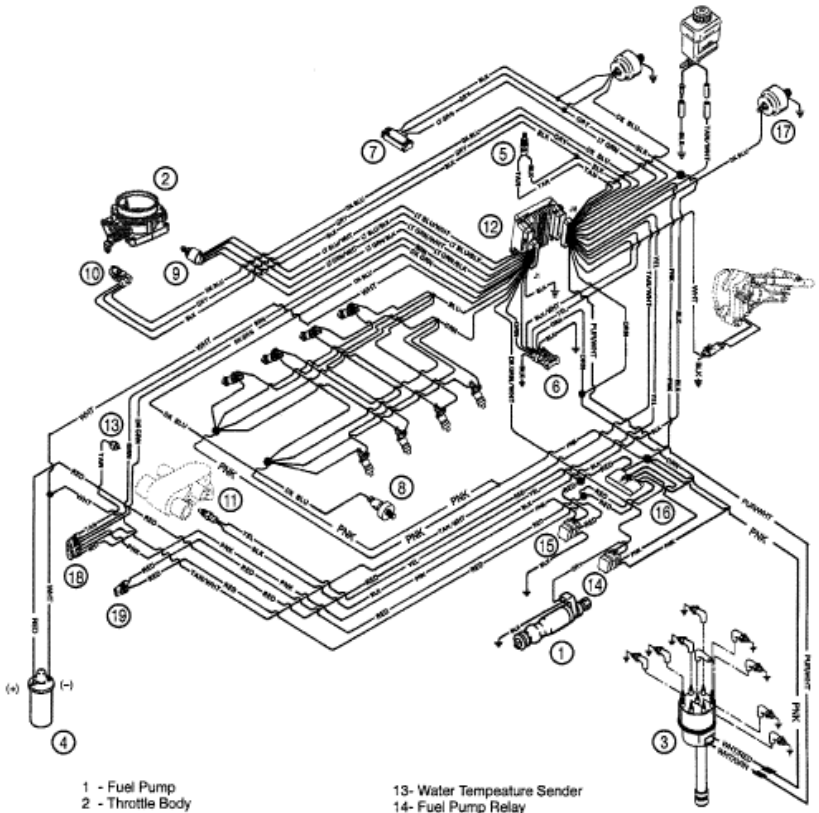

1 - Fuel Pump
2 - Throttle Body
3 - Distributor
4 - Coil
5 - Manifold Air Temperature Sensor (MAT)
6 - Data Link Connector (DLC)
7 - Manifold Absolute Pressure (MAP) Sensor
8 - Knock Sensor
9 - Idle Air Control (IAC)
10- Throttle Position (TP) Sensor
11- Engine Coolant Temperature (ECT) Sensor
12- Electronic Control Module (ECM)
13- Water Tempeature Sender
14- Fuel Pump Relay
15- Ignition/Fuel System Relay
16- Fuses (15 Amp) Fuel Pump, (15 Amp) ECM/DLC/Battery, (10 Amp) ECM/Injector/Ignition/Knock Module
17- Oil Pressure Sensor
18- Harness Connector To Starting/Charging Harness
19- Positive (+) Power Wire To Engine Circuit Breaker
20- Shift Plate
21- Gear Lube Monitor
22- Fuel Pressure Switch
23- Water Tempeature Sender
24- Water Tempeature Sender

Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
-		861159T 1	WIRING HARNESS-ENGINE	1		1